

Thank you for buying the GALAXY Note 3 (simply called the "product").
In this guide, settings and precautions for using the product are described.
For basic operations, refer to "Basic Manual".

Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies.

Sold by: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY
Imported by: SAMSUNG ELECTRONICS JAPAN Co., Ltd.
Manufactured by: Samsung Electronics Co., Ltd.
October 2013, 1st Edition

- **Basic operation**
Describes the basic operations.
- **Initial settings**
For the first time activation, set up Google account etc. according to the initial setting screen.
When Google account set up is finished, Google applications are prepared to use. And Gmail address is automatically created.
- **Mail settings**
Make initial settings to use E-mail (@ezweb.ne.jp). Your E-mail address is determined automatically after the initial settings but the E-mail address can be changed later.
- **Making a call**
Describes how to make a call.
- **Receiving a call**
Describes how to receive a call.
- **Importing/Exporting contacts**
Import contacts data from au phone you have ever used.
- **Viewing/playing data**
Describes how to view/play images or video data.
- **Backing up to microSD memory card**
Back up data such as images shot by Camera to microSD memory card.
- **Saving battery power**
Describes the settings for saving the battery power.

Basic operation

For details, refer to the "Instruction Manual" application installed on the product or "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.

- **Power key**
Power on
Press and hold
Unlock screen
Swipe the screen up/down/left/right.
- **Application icon**
Tap to display Apps list.
- **Back key**
Tap to return to the previous screen.
- **Home key**
Press to display the home screen.
- **Menu key**
Tap to display available functions (menu).
- **Display (Touch panel)**
Operate directly touching with your finger.
- **Status bar**
Display current status and notification icons.

Opening notification panel

When a notification icon is displayed, slide down the status bar to open the notification panel and then check the notification overview.

Touch panel operations

Operate with your finger or S Pen (supplied).

Tap
Lightly touch a screen and then immediately release your finger.

Slide
Lightly touch and trace to the desired direction.

Pinch
Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

Long-touch
Keep touching an item etc.

Flick (Swipe)
Quickly move (flick) your finger up, down, right, or left.

Drag
Keep touching an item or icon, trace it to the desired direction.

Selecting item

To select displayed item or icon, tap the screen directly.

Displaying menu

There are two types of methods to display a menu screen, by tapping [Menu] or by long-touching entry field or item.

Switch setting

When checkbox, radio button or ON/OFF switch appears at side of setting item, tap check box, radio button or ON/OFF switch to switch the ON/OFF of the setting.

Icon	Description
<input checked="" type="checkbox"/> / <input type="checkbox"/> / <input type="checkbox"/>	Setting is On.
<input type="checkbox"/> / <input checked="" type="checkbox"/> / <input type="checkbox"/>	Setting is Off.

Character entry

To enter characters, tap character entry field to display keyboard and then tap each key.

Software keyboard
Use "QWERTY Keyboard" or "3x4 Keyboard".

Tap [Shift] (if not displayed, long touch key in the same position), and in the displayed menu, tap "3x4 Keyboard ⇄ QWERTY Keyboard" to toggle between "3x4 Keyboard" and "QWERTY Keyboard".

Flick input

In "3x4 Keyboard", entering candidates for flick input appears as shown when you touch a key. Flick to the direction of character to enter.

* for Normal Flick

Initial settings

The first time the product turns ON, the initial setting screen appears automatically. Follow the guidance to make the settings.
* Depending on the settings, setting contents and displays may differ.

STEP START

- Initial settings screen appears
- Tap "日本語" → Select "English"
- [Next]

STEP 1: Wireless LAN (Wi-Fi®) function setting

Use your home wireless LAN (Wi-Fi®) or public wireless LAN to connect to the Internet.
Available Wi-Fi® networks are listed.
* Password (security key) is set on access point. Check in advance.

- Tap Wi-Fi® network to connect
* Tap [Next] to set later.
 - Enter a password (security key) → [Connect] → [Next]
- If an access point device supports WPS PIN code system, in Step 1, [WPS PIN] → [WPS PIN entry], and enter PIN code on the access point device to connect Wi-Fi® network.
 - If an access point device supports WPS Push button system, in Step 1, [WPS] → [WPS push button], and press WPS button within 2 minutes to connect Wi-Fi® network.

STEP 2: Basic setting

- Confirm the content → "I understand and agree to the terms and conditions above." → Select "Yes"/ "No thanks" → [Next]
- Set Samsung account as required

STEP 3: Google setting

Set up Google account to use Google applications such as "Gmail", "Google Play", and "Google+". Gmail address "(User name)@gmail.com" is automatically created by user name set in Google account.

- Get Google?
[No]
* If you have Google account, tap "Yes".
- Make it Google
[Get an account]
- Your name
Enter "First", "Last" → [Next]
- Choose username
Enter a "username" → [Next]
- Create password
Enter a password → [Next]
- Google password recovery
[Set up recovery options]
- Google password recovery
Enter phone number and/or spare mail address in case of forgetting the password → [Next]
- Join Google+
[Not now]
* If you select "Join Google+", set following the screen.
- Google services
Confirm the content → [Next]
* Unmark items not to use.
- Finish account
Tap the link and confirm the content → [I accept]

- Enter text displayed on screen → [Next]
- Make purchase settings of Google Play as required
* If you do not set, [Not now]

- Enter "First", "Last" → [Next]

STEP 4: Set up is complete

It is ready to use this product and set up completion screen appears.

- Set Dropbox as required
- Change the device name as required → [Finish]
● Tap "Learn more" to see descriptions for main functions of this product.

STEP 5: au Easy Setting

You can set au ID, au Wi-Fi SPOT, etc. all at once.
When you have created an au ID, you can use various au services including "au Simple Payment Service" which offers you a simple way to purchase applications from "au Smart Pass" and "Google Play". Create new au ID with this product or use your au ID.
● au ID which is already used by another user cannot be set.


- [Next]
- [Registration]
- Confirm the contents → [OK]
- [au IDの設定・保存 (Set/save au ID)]
- Enter a security password → [OK]
* Default value is 4-digit security code written at subscription.
- Set a password → Confirm Notes/Terms of Use → [利用規約に同意して新規登録 (Accept Terms of Use and register)]
* If you already have au ID, [au IDをお持ちの方はこちら (For au ID user)]
- [OK (au スマートパスへ (To au Smart Pass))]
* Not to get push notifications, tap "設定はコチラ (To set)".
- Completion screen appears
* Tap "設定画面へ (To setting screen)" and register information necessary to reissue password.
- "生年月日 (Date of birth)", "秘密の質問 (Secret question)", "答え (Answer)" → [入力完了 (Done)] → [設定 (Set)] → [終了 (Finish)]
- [終了 (Finish)]
- Confirm the content → [Next]
* If screen different from above is displayed, follow the onscreen instruction.
- To backup, confirm the content of and mark Terms of Service/Outline of Service → [Agree, and next]
* Tap [Next] to backup later.

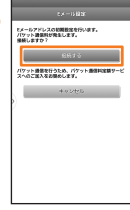 
Mail settings

Initial Setup of E-mail

 
To use E-mail (@ezweb.ne.jp), subscription to LTE NET is required. If you did not subscribe it when you purchased the product, contact an au shop or Customer Service Center.

- For model change from au phone, you can continue to use the E-mail address that is used on the former model by making initial settings.

- 

In the home screen, [E-mail]
- 


Confirm the contents → [接続する (Connect)]


 - If welcome screen appears, confirm the content and tap "Close"
- 

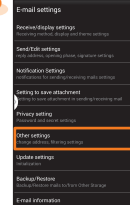 
Initial settings are complete, E-mail address appears → [閉じる (Close)]

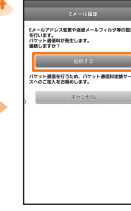 
Changing your E-mail address


Although E-mail address is automatically decided by performing Initial settings, the E-mail address can be changed.

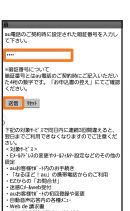 
- 

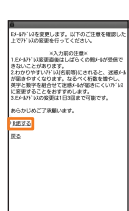 
In the home screen, [E-mail]
- 

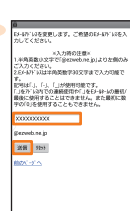 
[E-mail settings]
- 


[Other settings]
- 


Confirm the contents → [接続する (Connect)]
- 

[Eメールアドレスの変更 (Change E-mail address)]
- 

Enter the security code → [送信 (Send)]
- 

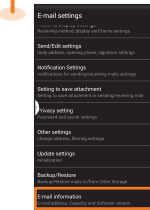 
Confirm the contents → [承諾する (Accept)]
- 

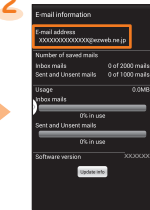 
Enter E-mail address → [送信 (Send)]
- 

[OK]
- 

[閉じる (Close)]

Checking E-mail address

- 

In the E-mail settings screen, [E-mail information]
- 

E-mail address appears

PC-mail

Set up the mail account that you usually use on your PC etc. on this product to send and receive mails to/from this product. Obtain information necessary for settings from your ISP in advance to make a mail account settings.

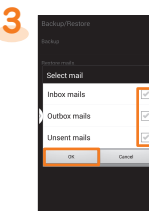 
Backing up E-mail

E-mails can be backed up to phone memory or microSD memory card. And backup data can be restored to E-mail application.

- 

In the E-mail settings screen, [Backup/Restore]
- 

[Backup] → [OK]


 - To restore, [Restore mails].
- 

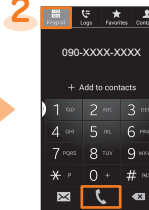 
Mark mail types/folders to back up → [OK]

 - When microSD memory card is inserted to this product, data is backed up to microSD memory card.

Making a call

Calling by direct input

- 

In the home screen, [Phone]
- 

"Keypad" tab → Enter a phone number → []

 - To dial using call log, in Step 2, tap "Logs" to select a log, then tap []

Calling overseas (au International Call Service)

You can make international calls without any special procedure from the product. To call overseas, in the phone number entry screen, enter an access code, country code, area code, and the phone number of the other party, then tap [].
* If the area code starts with "0", dial it without including the "0". (There are some exceptions such as fixed-line phones in some countries or regions including Italy and Moscow).

Calling from a contact

- 

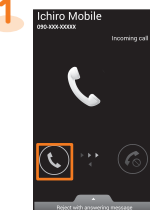 
In the Apps list, [Contacts]
- 

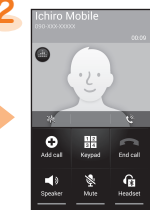 
Tap a party to call
- 

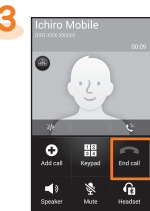 
Tap a phone number

Receiving a call

Calling

- 

In the receiving screen, drag/slide " " out of circle
- 

Calling starts
- 

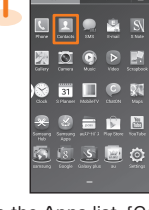 
To end the call, [End call]

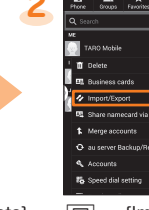 
 - To reject a call, in Step 1, drag/slide " " out of circle. When a call rejected, the caller hears the guidance.


Importing/Exporting contacts

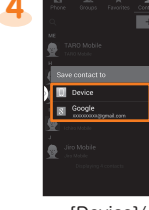 
You can transfer contacts data in the previously used au phone to the product via microSD memory card or au Micro IC Card (LTE).

* Save contacts data to microSD memory card or au Micro IC Card (LTE) from the previously used au phone in advance.

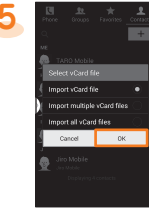 
- 

In the Apps list, [Contacts]
- 

[Import/Export]
- 

[Import from USB storage]/[Import from SD card]/[Import from SIM card]
- 

[Device]/Synchronized account

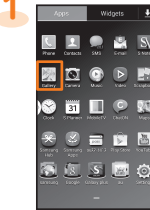 
 - Contacts data is imported. If there are multiple contacts data saved, go to Step 5.
 - If you have no synchronized account, go to Step 5.
- 

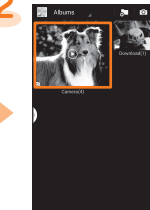 
Select contacts data to import → [OK]


 - To import from au Micro IC Card (LTE), select contacts data to import and then tap "Done".

Viewing/playing data

View/play images or videos saved in the phone memory or microSD memory card.

- 

In the Apps list, [Gallery]
- 

Select an album
- 

Select data to view

 - To play video, tap []

Backing up to microSD memory card

Using My Files to back up phone data to microSD memory card.

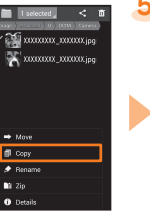 
* "Device storage" indicates phone memory and "SD memory card" indicates microSD memory card. To show them, tap [All] in the category list screen.

Example: Backing up data shot by camera

- 

In the apps list, [My Files]
- 

[All] → [Device storage] → [DCIM] → [Camera]
- 

Tap checkbox of data to back up
- 

[Copy]
- 

[SD memory card] → Select a folder to save in → [Paste here]

 - [SD memory card] → [] → [Create folder] to create a new folder.

Data saving locations in phone

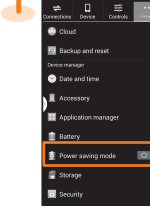 
Data type		Data location
Data shot by camera		/storage/emulated/0/DCIM/Camera
E-mail (@ezweb.ne.jp)*	Received mail	/storage/emulated/0/private/au/email/BU/RE
	Sent mail	/storage/emulated/0/private/au/email/BU/SE
	Unsent mail	/storage/emulated/0/private/au/email/BU/DR
	Attached data of received mail is saved	/storage/emulated/0/private/au/email/MyFolder
	Inserted image of received mail (including D-pictogram) is saved	/storage/emulated/0/private/au/email/MyFolder
Data such as images saved by Browser		/storage/emulated/0/Download

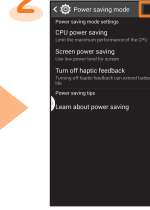 
* Saving locations when data is backed up to phone by E-mail application.

Saving battery power

Setting saving power mode

Set to switch to saving power mode automatically when the battery level becomes low.

- 

In the home screen, [Settings] → "General" tab → [Power saving mode]
- 

Tap " " in "Power saving mode" to turn to " " → Mark/unmark each function